


Uncompress software “AD101w.zip” and “AD102w.zip”.
(Double-click “AD101w.zip” and “AD102w.zip”.)

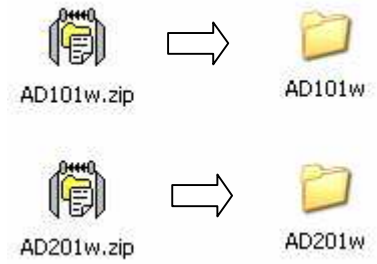

Painting Software

AD101w (NA3.1-DoubleX[TOP])

AD201w (NA3.1-DoubleX[BOTTOM])

These are copied to Removable media.

“Painting Station Computer”

Installation of the Painting System

NOTE: Parameter files will be overwritten when you installed a system.

Save the parameter value before installing.

Select F4, “Settings” from the “Main Menu”. Select F3, “SAVE”.

And then Load the parameter value after installing new system.

Select F4, “Settings” from the “Main Menu”. Select F4, “LOAD”.

1. Insert the Removable media into the drive.
2. Double-click the folder “AD101w” .
3. Double-click " SETUP.wsf ".

The setup-window opens and starts setup.


When it is completed, close the setup-window.

4. Install “AD201w” similarly.




PRINT START POSITION FILE (Start Pos Data)

X and Y coordinates of a printing start position are prepared for the Hard Disk by the text file.
A file name gives 1.inf and 2.inf ... and the number of 0 to 255 like Image Data File or Body Data File.

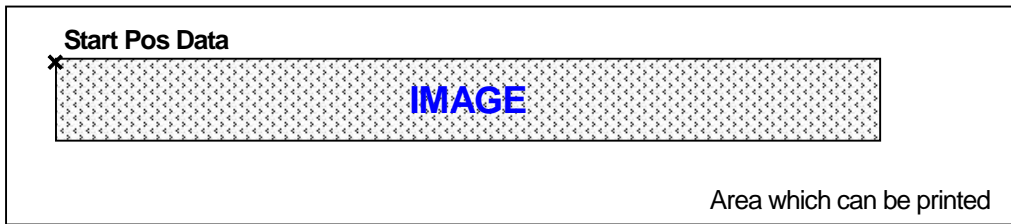

Example:

Start Pos Data: " 1.inf "

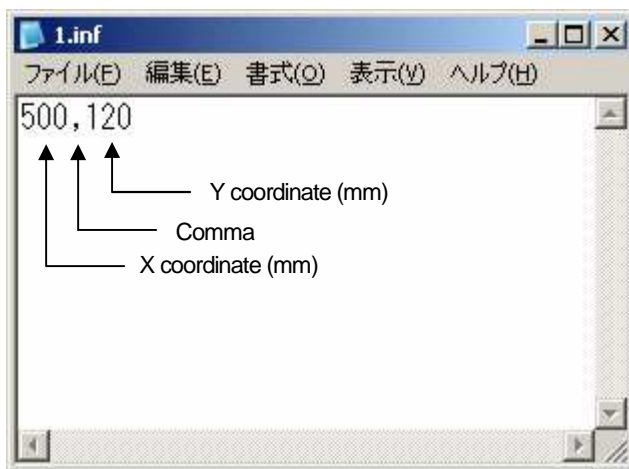

X coordinates, (comma) Y coordinates Describe per mm. (Neither Space nor Tab is used.)

Note:

1. These coordinates are the start position information on image data.
2. Offset of body data cannot be performed.

Store Print Start Position File in the following folder.

AD101w (NA3.1-DoubleX[TOP]): "C:\LAC_132"

AD201w (NA3.1-DoubleX[BOTTOM]): "C:\LAC_133"

Print Start Position File is referred to with Image File and Body Data File at the time of a remote start.